

No	Part #	Description	Qty.
1	ST02FD-05702005	Switch	1
2	ST02FD-05302008	D.C 2A Breaker	1
3	ST01FD-05701001-1	Switch	1
4	2630--2	Multi-purose Meter	1
5	2631	Touch Switch	1
6	ST02FD-05502020	Receptacle L5-30R	1
7	ST02FD-05502022	Receptacle L14-30R	1
8	ST02FD-05502023	Receptacle 5-20R	2
9	ST05FD-1151208-M	Grounding Bolt	1
10	ST02FD-05302001-30	A.C 30A Breaker	2
11	ST02FD-05302001-20	A.C 20A Breaker	2
12	ST05FD-05205002	Case	1
13	GB818-85-S5-38	Screw M5×38	3
14	ST05FD-05215003	Build Up	1
15	ST05FD-05215009	Conduit	1
16	ST05FD-05215001	Build Up	1
17	GB5789-86-FB5-12	Flange Bolt M5×12	2
18	ST05FD-1152001	Generator End Cover	1
19	GB5789-86-FB5-16	Flange Bolt M5×16	5
20	ST02FD-02100010	Terminal	1
21	ST05F-1152030-CPE	AVR	1
22	ST02FD-02100008	Brush Assembly Cover Board	1
23	ST05FD-1152035	Brush Assembly	1
24	ST05FD-1152002	End Cover	4
25	GB5789-86-FB6-179	Flange Bolt M6×179	1
26	ST05FD-1152003	Stator Cover	1
27	GB5787-88-FB10-265	Flange Bolt M10×1.25×265	1
28	ST05FD-1152010	Stator Assembly	1
29	GB93-1987-SW10	Spring Washer Φ10	1
30	GB5287-86-W10	Washer Φ10	1
31	ST05FD-1152020	Rotor Comp	3
32	GB5789-86-FB6-8	Flange Bolt M6×8	1
33	ST05FD-1151600	Cover	1
34	ST188FDE-1000000	Engine	1
35	ST188F-1020001	Grommet	1
36	2910	Rectifier	1
37	ST05FD-05032200	Control Panel	22
38	GB5789-86-FB6-12	Flange Bolt M6×12	1
39	ST182FD-1742002-CPE	Control Panel Defend Board	2
40	ST182FD-1742003-UC	Straight Bottom Rubber	2
41	GB96-85-BW8	Big Washerφ8	2
42	GB93-1987-SW8	Spring Washer φ8	2
43	GB5789-86-FB8-35	Flange Bolt M8×35	1
44	ST05FD-1151400-1	Bottom Rubber 2	1
45	ST05FD-1151300-1	Bottom Rubber 1	6
46	GB6177-86-N8	Nut M8	1
47	ST188FD-1744001-K	Axle (27.8 in)	2
48	GB6177-86-M10	Nut M10	1
49	ST05FD-03351000-5	Frame	1
50	ST168FD-1160400	Fuel Cock	1
51	ST188FD-1160200	Fuel Tank	1
52	ST02FD-04130000	Fuel Filter	1
53	ST02FD-04120000	Fuel Tank Cap	2
54	GB819-85-S5-8	Screw M5×8	1
55	ST05FD-04120000	Fuel Meter Assembly	4
56	GB5789-86-FB6-20	Flange Bolt M6×20	4
57	GB5287-86-W6	Washer Φ6	4
58	ST02FD-04100011	Tank Rubber	2
59	ST188FD-1070006A	Clip	1

60	ST188FD-1160002	Fuel Tube (Length 6.7in)	1
61	ST188FD-1090006	Air Cleaner Stay	1
62	GB6177-86-N6	Nut M6	2
63	GB97.1-85-W8	Washer $\Phi 8$	2
64	GB93-1987-SW8	Spring Washer $\phi 8$	2
65	GB41-2000-N8	Nut M8	1
66	ST188FD-1100001	Muffler Gasket	1
67	ST188FD-1730001	Ex Pipe	7
68	GB5789-86-FB8-20	Flange Bolt M8 \times 20	1
69	ST188FD-1730100	Muffler Gasket	1
70	ST188FD-1732200-A	Muffler Outer Protector	2
71	GB5789-86-FB5-10	Flange Bolt M5 \times 10	2
72	GB93-1987-SW5	Spring Washer $\phi 5$	1
73	ST188FD-1100010-88	Spark Arrester Cover	1
74	ST188FD-1180121	Spark Arrester Assembly	1
75	ST188FD-1731000A	Muffler	1
76	GB5781-86-FB8-16	Flange Bolt M8 \times 16	1
77	GB5781-86-FB8-20	Flange Bolt M8 \times 20	8
78	GB5789-86-FB6-12	Flange Bolt M6 \times 12	1
79	ST188FD-1732101	Muffler Inner Protector	1
80	ST182FD-1742203-UC	Handle Sheath	1
81	ST182FD-1742201-UC	Handle	1
82	ST182FD-1742202-UC	Handle Underlay	2
83	GB896-86-UB8	Uncork Baffle $\phi 8$	2
84	GB896-86-UB6	Uncork Baffle $\phi 6$	2
85	ST182FD-1742002-UC	Pin	2
86	ST02FD-1151207-M	Grounding Line	1
87	ST188FD-1750002-C1	Battery Red Wire (+)	1
88	ST188FD-1750002-C2	Battery Black Wire(-)	1
89	ST188FD-1751002	Jacket	3
90	GB62-88-N6	Nut M6	2
91	2230	Light(LED)	1
92	ST188FD-1700210-C	Battery Setting Plate	1
93	FM12180	Battery12V18AH	1
94	ST188FD-1700203-C	Bolt M6	2
95	ST188FD-1700200-C	Battery Guard	1
96	GB5789-86	Flange Bolt M8 \times 50	2
97	GB5789-86-FB8-32	Flange Bolt M8 \times 32	2
98	ST188FD-1740004-C	Vibration Mount	2
99	ST188FD-1743001-T	Support Leg	1
100	GB5789-86-FB8-16	Flange Bolt M8 \times 16	4
101	ST182FD-1742001-CPE	Fuel Tank Wing	2
102	ST188FD-1744002-T	Wheel	2
103	GB97.1-85-W16	Washer $\Phi 16$	2
104	GB/T91-2000-RP3.2-40	Retain Pin 3.2 \times 40	2